

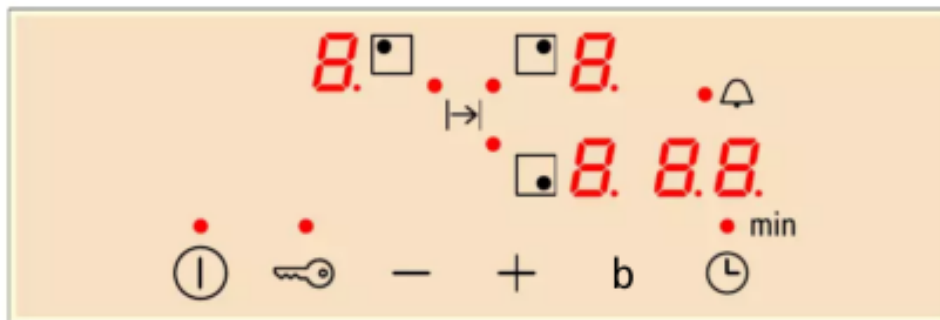
SIEMENS EU631BJB2E INDUCTION COOKER MANUAL

Getting to know your appliance

You can find information on the dimensions and power of the hotplates in → Page 2

Note: Depending on the appliance model, individual details and colours may differ.

The control panel



Controls

| | |
|-----|----------------------|
| ⓘ | Main switch |
| ■ | Selecting a hotplate |
| -/+ | Adjustment fields |
| b | PowerBoost function |
| 🕒 | Timer function |
| 🔑 | Childproof lock |

Indicators

| | |
|-----|---------------------|
| ⓘ | Operating status |
| 1:9 | Heat settings |
| H/h | Residual heat |
| b | PowerBoost function |
| 00 | Timer |

Touch controls

Touching a symbol activates the associated function.

Notes

- Always keep the control panel clean and dry. Moisture reduces its effectiveness.
- Do not place any cookware near the indicators or sensors. The electronics could overheat.

The hotplates

Hotplates

○ Simple hotplate Use cookware that is a suitable size

Only use cookware that is suitable for induction cooking; see section → "Induction cooking"

Residual heat indicator

The hob has a residual heat indicator for each hotplate. This indicates that a hotplate is still hot. Do not touch a hotplate while the residual heat indicator is lit up.

The following indicators are shown depending on the amount of residual heat:

- Display **H**: High temperature
- Display **h**: Low temperature

If you remove the cookware from the hotplate during cooking, the residual heat indicator and the selected heat setting will flash alternately.

When the hotplate is switched off, the residual heat indicator will light up. Even after the hob has been switched off, the residual heat indicator will stay lit for as long as the hotplate is still warm.

Operating the appliance

This chapter explains how to set a hotplate. The table shows heat settings and cooking times for various meals.

Switching the hob on and off

The main switch is used to switch the hob on and off.

To switch on: Touch the **I** symbol. An audible signal sounds. The indicator next to the main switch and the hotplate indicators **I** light up. The hob is ready to use.

To switch off: Touch the **I** symbol until the indicator goes out. All hotplates are switched off. The residual heat indicator remains lit until the hotplates have cooled down sufficiently.

Notes

- The hob switches off automatically if all hotplates have been switched off for more than 20 seconds.
- The selected settings are stored for four seconds after the hob has been switched off. If you switch it on again during this time, the hob will operate using the previously stored settings.

Setting a hotplate

Use the **+** and **-** symbols to select the required heat setting.

Heat setting **1** = lowest setting.

Heat setting **9** = highest setting.

Every heat setting has an intermediate setting. This is marked with a dot.

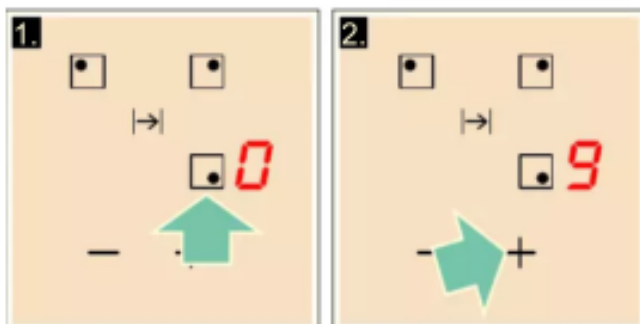
Notes

- To protect the fragile parts of your appliance from overheating and electrical overloading, the hob may temporarily reduce the power.
- In order to prevent the appliance from producing excess noise, the hob may temporarily reduce the power.

Selecting a hotplate and heat setting

The hob must be switched on.

1. Select the hotplate by touching the **I** symbol.
2. Touch the **+** or **-** symbol within 10 seconds. The following basic setting appears:
 - + symbol: **9** heat setting
 - symbol: **4** heat setting



The heat setting is set.

Changing the heat setting

Select the hotplate and touch the **+** or **-** symbol until the required heat setting appears.

Switching off the hotplate

Select the hotplate and then touch the **+** or **-** symbol until **I** appears.

The hotplate switches itself off and the residual heat indicator appears.

Notes

- If no pan has been placed on the hotplate, the selected power level flashes. After a certain time has elapsed, the hotplate switches off.
- If a pan has been placed on the hotplate before switching on the hob, it will be detected within 20 seconds of pressing the main switch and the hotplate will be selected automatically. Once detected, select the power level within the next 20 seconds or the hotplate will switch off. If more than one pan is placed on the hob, only one will be detected when switching it on.

Chef's recommendations

Recommendations

- When heating up puree, cream soups and thick sauces, stir occasionally.
- Set heat setting 8 to 9 for preheating.
- When cooking with the lid on, turn the heat setting down as soon as steam escapes between the lid and the cookware. Steam does not need to escape for a good cooking result.
- After cooking, keep the lid on the cookware until you serve the food.
- To cook with the pressure cooker, observe the manufacturer's instructions.
- Do not cook food for too long, otherwise the nutrients will be lost. The kitchen clock can be used to set the optimum cooking time.
- For a more healthy cooking result, smoking oil should be avoided.
- To brown food, fry small portions in succession.
- Cookware may reach high temperatures while the food is cooking. We recommend that you use oven gloves.
- You can find recommendations for energy-efficient cooking in section → "Environmental protection"

Time-setting options


 
Your hob has two timer functions:

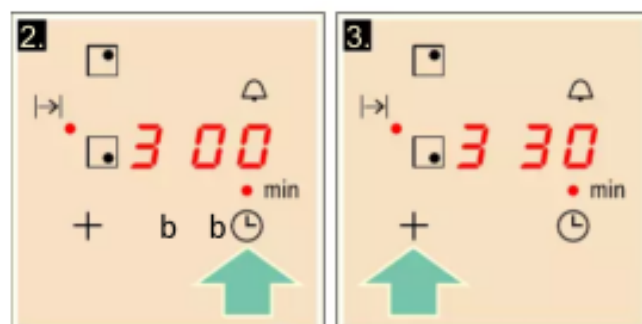
- Programming the cooking time
- Kitchen timer

Programming the cooking time

The hotplate automatically switches off after the time that is set has elapsed.

Setting procedure:

1. Select the hotplate and the required heat setting.
2. Touch the  symbol. ● lights up in the display for the hotplate.  appears in the timer display.
3. Touch the + or - symbol. The basic setting appears:
 - + symbol: 30 minutes.
 - symbol: 10 minutes.

 
 


4. Use the + or - symbol to select the required cooking time.

 
 
After a few seconds, the time begins to elapse.

Note: The same cooking time can be set automatically for all hotplates. The set time for each of the hotplates counts down independently. You can find information on automatically programming the cooking time in section → "Basic settings"

Changing or deleting the time

Select a hotplate. Touch the  symbol and use the + or - symbols to change the cooking time, or set the time to .

Once the time has elapsed

The hotplate switches off. A beep sounds and in the time program function display  appears for 10 seconds. The ● indicator on the hotplate lights up. Pressing the  symbol turns off the indicators and stops the beeping.

Notes



 

- If a cooking time was programmed for several hotplates, the time information for the selected hotplate is shown in the timer display.
- You can set a cooking time of up to 99 minutes.

The kitchen timer


 
 
You can use the kitchen timer to set a time of up to 99 minutes.

This functions independently from the hotplates and from other settings. This function does not automatically switch off a hotplate.

 
Setting procedure


1. The kitchen timer can be set in two different ways:
 - If a hotplate has been selected, touch the  symbol twice.
 - If no hotplate is selected, touch the  symbol. The ● display beside the  symbol lights up.  appears in the timer display.
2. Touch the + or - symbol. The basic setting appears.
 - + symbol: 10 minutes.
 - symbol: 5 minutes.
3. Use the + or - symbol to set the required time. After a few seconds, the time begins to count down.

Changing or deleting the time

Touch the symbol  repeatedly until the ● indicator lights up beside the  symbol. Change or set the time to  using the + or - symbol.

Once the time has elapsed

A warning signal sounds.  is displayed on the time program function display. After 10 seconds the indicators turn off.

Pressing the  symbol turns off the indicators and stops the beeping.

PowerBoost function

The PowerBoost function enables you to heat up large quantities of water faster than when using heat setting **9**.

The function can be used by any hotplate provided that no other hotplates are switched on. Otherwise **b** and **9** will flash in the heat setting display.

Activation

1. Select a hotplate.
2. Touch the **b** symbol.
b lights up on the display.
The function is activated.

Note: If a hotplate is switched on while the PowerBoost function is active, **b** and **9** will flash on the heat setting display; heat setting **9** will then be applied automatically. The PowerBoost function will now be deactivated.

Deactivation

1. Select the hotplate.
2. Touch the **b** symbol.
The **b** display goes out and the hotplate switches back to the **9** heat setting.
The function is deactivated.



Note: In certain circumstances, the PowerBoost function can switch itself off automatically in order to protect the electronic elements inside the hob.


Childproof lock

You can use the childproof lock to prevent children from switching on the hob.

Activating and deactivating the childproof lock

The hob should be turned off.

To activate: press the symbol  for approximately 4 seconds. The indicator next to the symbol  lights up for 10 seconds. The hob is locked.

To deactivate: press the symbol  for approximately 4 seconds. The lock is now deactivated.

Childproof lock

With this function, the childproof lock automatically activates when a hob is switched off.

Switching on and off

You can find out how to switch the automatic childproof lock on in the → "Basic settings" section

Automatic safety cut-out

If a hotplate operates for an extended period and no settings are changed, the automatic safety shut-off is activated.

The hotplate stops heating. **F**, **8** and the residual heat indicator **h** or **H** flash alternately in the hotplate display.

When you touch any symbol, the display switches off. The hotplate can now be set again.

The point at which the safety shut-off becomes active depends on which heat setting has been set (after 1 to 10 hours).