


MANUAL TV AND DECODER. IPTV

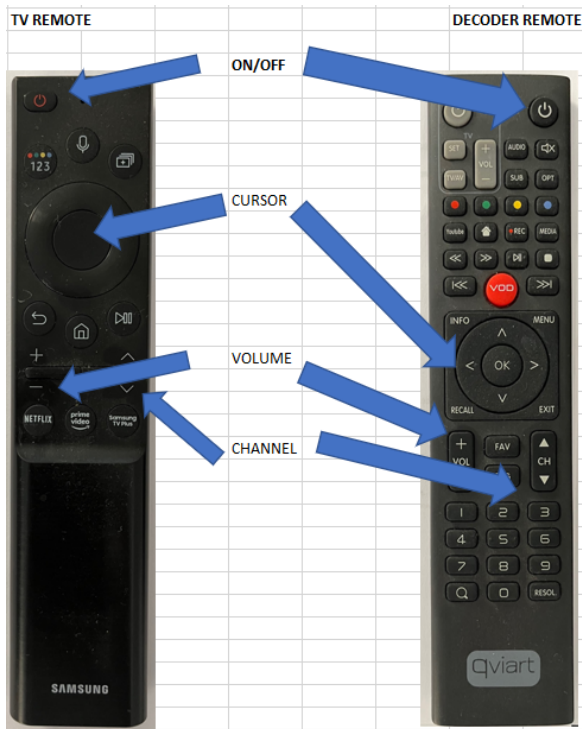


To watch TV channels you need to do the following. Press the ON button on both the TV and the decoder remote control. (2 lights on the decoder box at the front will light up) If you see the following after a few seconds, the decoder will start up. This takes a few seconds. You can proceed to the step “how does the decoder work”.



If this does not appear, please take the following steps, for this you only need the remote control of the TV. You can move up/down/left/right with the cursor. Press the house and go to the row that includes Netflix and Disney. Then move the cursor to the left until the SOURCE box. If you are on this square, it will turn white. Then move the cursor up to decoder and press the big round button on the remote control. You should now have an image. If this is not the case, check whether 2 lights on the front of the black decoder box are lit. If this is not the case, press the ON button on the decoder remote control again.


How does the decoder work. (ONLY THE DECODER REMOTE CONTROL)

When this starts you will see the last viewed channel on the screen. With the CH button you can switch between the different channels. If you press the OK button, a menu will open and you will see a number of different channels. The top left of the screen shows how many different categories there are and the top center of the screen shows the number of channels that fall into the relevant category.

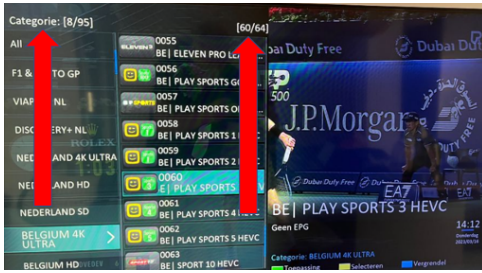

The right row are the channels that fall under the highlighted left row. With the cursor arrows up and down you can press through the different channels within the right row. Once you have found the favorite channel, press OK. To get to the left row (category) press the 1x on the left cursor. Now you can push through this using the cursor arrow up/down. Once you have found the right category, press the right cursor once. You can now scroll through the channel selection within this group with the cursor up/down. Once you have found the right channel, press OK and then EXIT twice.

In addition to the television Free channels, it is also possible to watch film, series and radio channels. To do this, press the menu button, in some cases you have to press it 2 or 3 times to see the following.

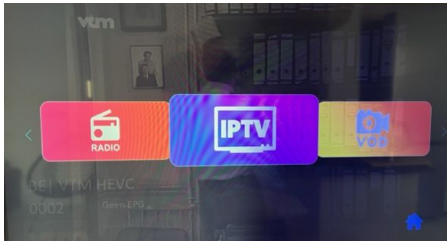

Move the cursor left/right to determine the choice and press OK.

IPTV = the TV channels

VOD = movie channels

TV SERIES = TV series

RADIO = radio

Selecting a movie or a series is the same as choosing the TV channels. Only when the radio is selected only CH buttons work.

If you want to return to IPTV, for example, press the MENU button once and you will return to the menu where you can choose IPTV.

It may happen that the image freezes, in this case pull the small round plug out of the decoder for 10 seconds. Then plug it back in and the decoder will restart. Mind you, this takes a few seconds!

